




Twist 5 ft piece (fold in half first) of 14 gauge tinned wire (452014) then solder to base before attaching anchor

Page 1

1 ft Pewter Chain Link (9111P) for hanging

Metal ring (# 9126)

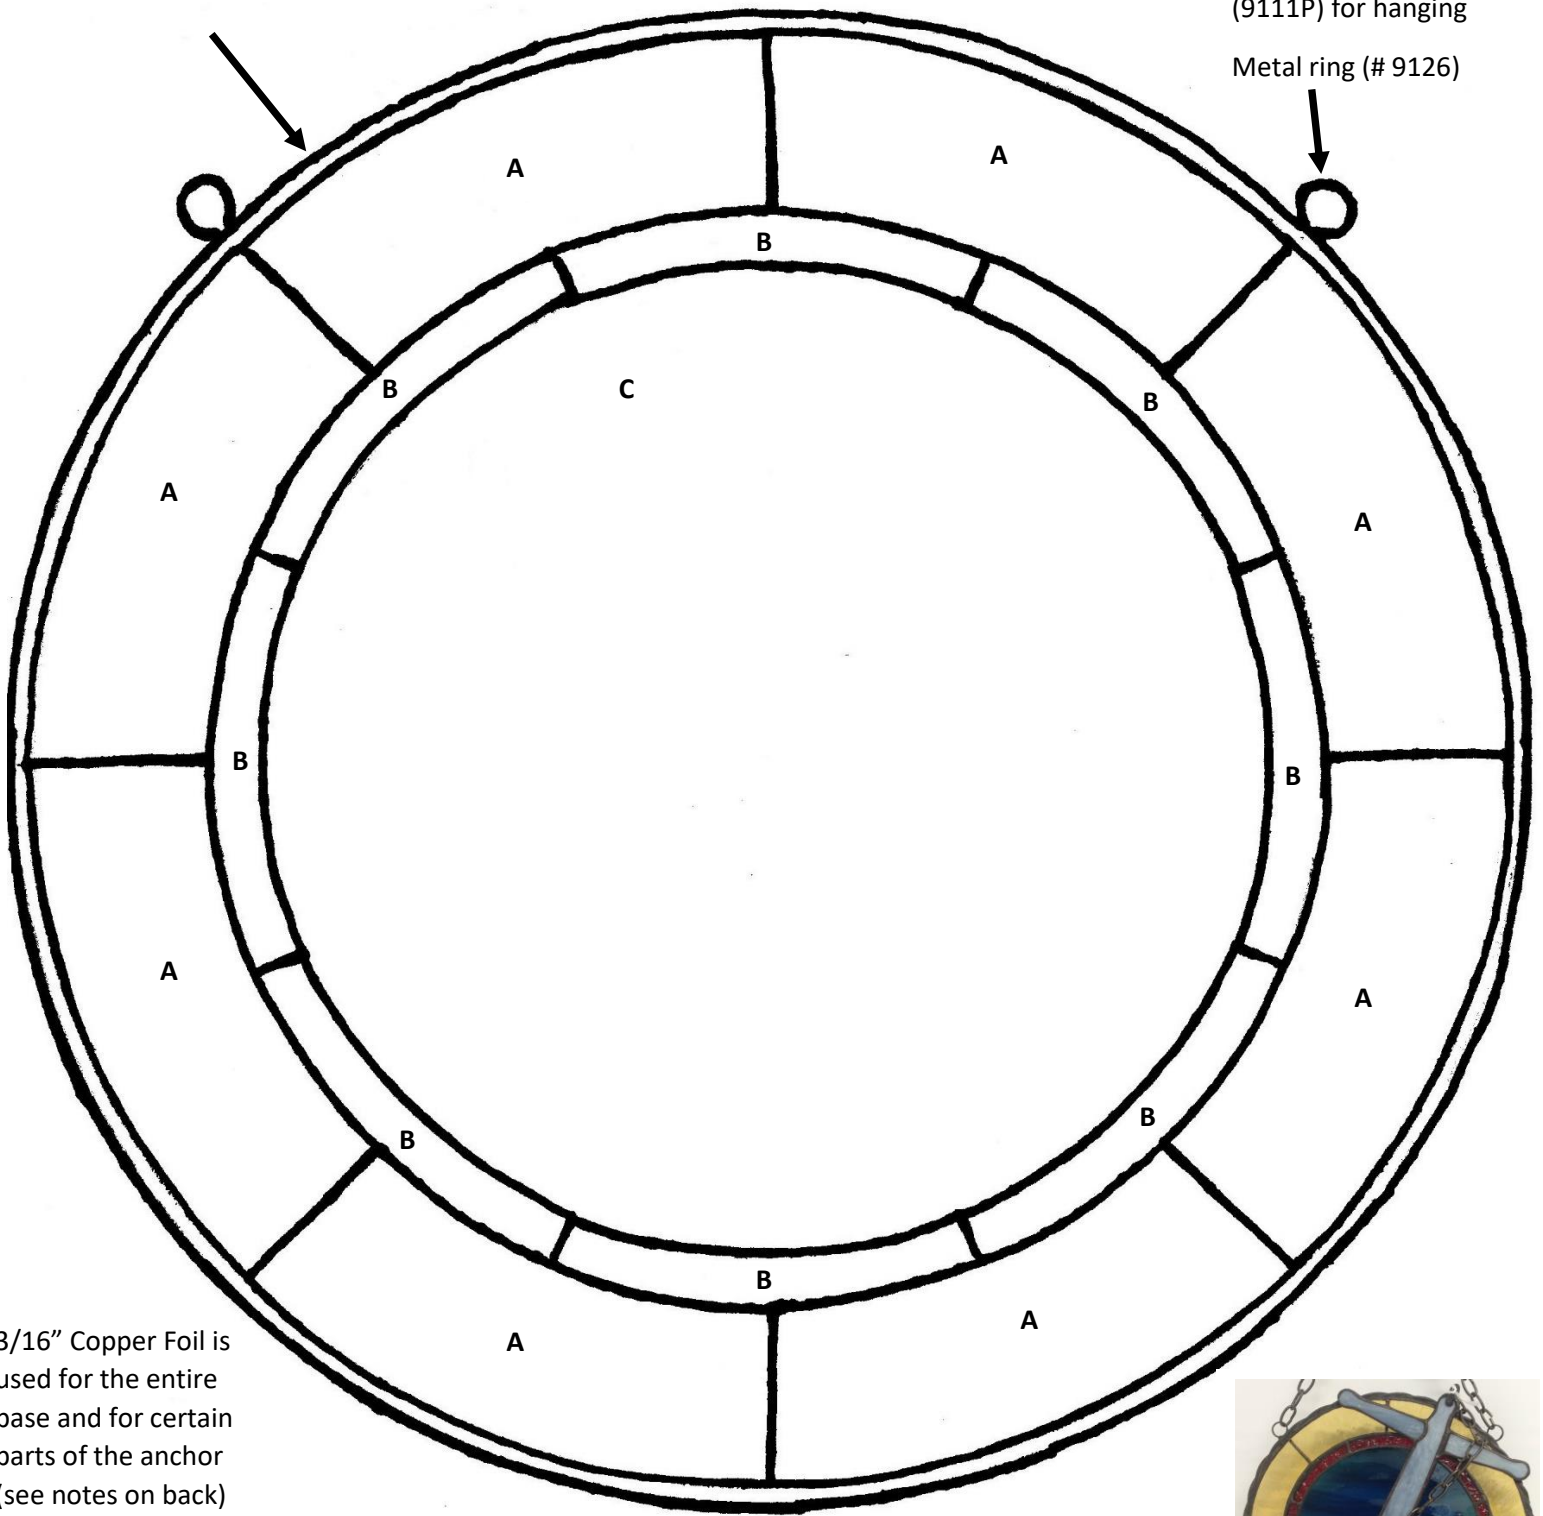

3/16" Copper Foil is used for the entire base and for certain parts of the anchor (see notes on back)



*Designed by Janet Parkhurst and Jim Veilleux*

*Constructed by Jim Veilleux*

3/16" Copper Foil wrapped over medium metal ring (# 9126)

1 ft Pewter Chain Link to "wrap around" face of anchor starts here

Start point for thin wire. Run between anchor and base and around chain after anchor soldered to base and twist to hold in place (attach chain to mount first). Run wire behind anchor and around chain at each designated point ('W'), twisting wire at each point to make a loop to hold chain link in place.

'X' = Approximate attach points of anchor to base

////////// = 7/32" Copper Foil

